

## **GUARD ALL SAFE INSTRUCTIONS**

### **1: TO OPEN**

- A) PRESS \*
- B) ENTER COMBINATION CODE (EG FACTORY SETTING "0000")
- C) PRESS "#" TO CONFIRM
- D) GREEN LED FLASHES & A SERIES OF BEEPS FOLLOW, ACCEPTING THE CODE AS CORRECT.
- E) WHEN INCORRECT CODE HAS BEEN ENTERED, THE RED LED FLASHES 3 TIMES ALONG WITH 3 LONG BEEPS.
- F) IF THE INCORRECT CODE HAS BEEN ENTERED 4 TIMES THE KEYPAD WILL SHUT DOWN (LOCK OUT) FOR 5 MIN. AFTER THE 5 MINUTES HAS PASSED THE KEYPAD WILL COME BACK TO LIFE.

### **2: TO CHANGE COMBINATION**

- A) PRESS "#" BUTTON
- B) ENTER OLD COMBINATION CODE
- C) PRESS "#" BUTTON
- D) ENTER NEW COMBINATION CODE (4-8 DIGITS)
- E) PRESS "#" BUTTON.

### **3: TO CHANGE THE BATTERIES WHEN LOW**

- A) ROTATE THE KEYPAD IN AN ANTI – CLOCKWISE DIRECTION TO UNCLIP AND HOLD IN YOUR HAND. THIS WILL REVEAL 4 OF "AAA" SIZE BATTERIES. REPLACE ALL 4, ONE AT A TIME. TURN AND CLIP KEYPAD BACK ON AND IT SHALL RESORT BACK TO NORMAL FUNCTIONING.

